

# Synergy® V

## Model RT-U64CP

Universal / DVR Remote Control



### Programming And Operating Instructions

© 2007, Contec, LLC, Rev. 10/07

#### Synergy® V Model RT-U64CP

##### 1. Introduction

Your Synergy® V Universal / DVR remote control is simple to program, easy to use, and can operate up to five (5) electronic devices, which include:

<b>CABLE</b>	Cable set-top terminals
<b>TV</b>	Televisions
<b>VCR</b>	VCR
<b>DVD</b>	DVD
<b>AUDIO</b>	Audio receivers, amplifiers, CD players

Before you can use your remote control, it must be programmed (set-up) to operate the above devices.

##### 2. Before Getting Started

Some of the special features and buttons on your remote control are as follows

##### Point and Press® Programming

Lets you program your TV, VCR, DVD, AUDIO devices without using codes. For more information, see sections 5 and 14.

##### [ALL] SmartKey®

Turns your CABLE set-top terminal and TV on / off with one button press. [ALL] can also be programmed to turn on / off additional electronic devices, or automatically set your correct TV output channel. For more information, see section 9.

##### [MODE]

Indicates which mode (i.e. CBL, TV, VCR, DVD, AUDIO) the remote is currently operating in by illuminating the power button. To change to a different mode, press [MODE], then the power button for the electronic device you wish to operate. For more information, see Section 15.

##### Memory Guard®

Eliminates reprogramming after battery changes.

##### 3. Installing / Replacing Batteries

Install two (2) new AA Alkaline batteries. Properly match the + / - ends of the batteries with the diagram in the battery compartment.

#### Synergy® V Model RT-U64CP

When the batteries become low and need to be replaced, the [CBL], [TV], [VIDEO], [AUDIO] buttons will not illuminate normally, or at all during use, and the remote will no longer operate your devices. When this occurs, replace the existing batteries with two (2) new AA Alkaline batteries to restore normal operation to the remote. For more information, see Section 14.

##### 4. Programming Your Cable Set-Top Terminal

Your remote control is pre-programmed to operate the **Scientific Atlanta Explorer® 8000 digital set-top terminal**. To operate a different cable set-top terminal, look up the brand and model in the Cable Setup Code list and follow these steps :

- Press [SEL], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL).
- From the **Cable Setup Code list**, locate the 3-digit code for your brand / model and enter it on the keypad of the remote control. The set-top terminal will turn off.
- Then, press [SEL] to lock in the code. The power / mode buttons will blink 3-times and go out.

##### Cable Setup Codes

<b>Motorola</b>		
DCT, CFT2200	002	
CFT 2100, CFT 2000	002	
DCT 62xx series DVR terminals	002	
<b>Jerrold</b>		
DL4, DP(V), DQNV(V), DPBB	003	
<b>Scientific Atlanta</b>		
Explorer® 8000 (w/o Day ◀, ▶)	412	
Explorer® 8000 (with Day ◀, ▶)	413*	
<b>Pace</b>		
510 Digital	412	
HD Digital	010	412

#### Synergy® V Model RT-U64CP

<b>Pioneer</b>		
Voyager™	004	
BA-V1000, BA-V2000	007	
<b>Samsung</b>		
SMT-H3050	412	
<b>Tocam</b>		
5503VIP, 5507, 5508	008	
<b>Zenith</b>		
MM2500	009	
Digital	013	

\* Supports Explorer® 8000 set-top terminals running Passport™ software with Day ◀ / ▶ functionality in Electronic Program Guide

##### 5. Programming Your TV, VCR, DVD and AUDIO Devices

##### Code Entry Programming

- Turn on all the electronic devices (TV, VCR, DVD, AUDIO) you want to program the remote to operate.
- Press [SEL], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).
- a. To program your TV, locate the 3-digit code for your brand in the **TV Setup Code list** and enter it on the keypad of the remote control. Entry of the correct code will cause your TV to turn off. If multiple codes are listed for your brand, you may have to try several different codes until your TV turns off.  
b. As soon as you have entered a 3-digit code that turns your TV off, press [MUTE].
  - If the TV turns back on, press [SEL] to lock in the code. The power / mode buttons will blink 3-times and go out.
  - If the TV does not turn back on, enter a different 3-digit setup code until your TV turns back on. Then press [SEL] to lock in the code. The power / mode buttons

will blink 3-times and go out.

- To program your VCR refer to the **VCR / DVD Setup Code lists** and repeat steps 2 and 3 above.
- To program your DVD refer to the **VCR / DVD Setup Code lists** and repeat steps 2 and 3 above.
- To program your AUDIO equipment, refer to the **AUDIO Setup Code list** and repeat steps 2 and 3 above.

##### Point and Press® Programming

This method allows you to program the remote control without using codes. Instead, the remote control automatically finds the correct command that you select in a variety of codes until you find the code that operates your device. You then lock in the correct code as described below.

The following instructions describe how to program your remote control using the [CH +] or [CH -] buttons ("Power" function during programming). You may also program your remote control using other buttons / functions as described in Section 14. When using this method, there are several important points to remember:

- The order in which you program your electronic devices is not important.
- There may be several codes that turn your electronic devices on / off (or perform other functions). Once you lock-in a code, be sure to check the available functions for that device (i.e. TV - Vol +/-, Mute, TV Input (Video Source button), VCR - Play, Stop..., DVD - Play, Stop..., AUDIO - Vol +/-, Mute) to see if they are operating.
- While the remote is searching for the correct setup code(s) for your electronic devices, it is possible that other (previously programmed) devices may turn on / off (or perform other functions). If this occurs, continue pressing the [CH +] or [CH -] buttons (or the buttons described in Section 14) until you find the correct code for the device you are programming.
- It may take several minutes for the remote to find the correct code that turns your device off (or performs another selected function). During this time, the power / mode buttons will illuminate in fast-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).

#### Synergy® V Model RT-U64CP

<b>Broksonic</b>			333	337	358	359
Canon	086	362				
Citizen	033	172	247	331		
Colortyme	291					
Craig	172	363				
Curtis Mathes	086	112	247	291		
Daewoo	033	343	344	345	346	
Daytron	345	365				
DBX	243	291				
Dynatech	132					
Emerson	033	086	132	326	331	
Fisher	035	081	357	363	238	
Funai	132					
GE	086	172	174	170		
Go Video	348	349	350	331		
Goldstar (LG)	247	331				
Hamman Kardon	291					
Hitachi	078	132				
Instant Replay	086					
JC Penney	078	086	172	238	291	
JCL	086					
JVC	120	128	243	247	250	
Kenwood	253	238				
LG (Goldstar)	120	132	238	243	247	
Lloyd	247	331				
Logik	132					
LXI	132	331				
Magnavox (Philips)	086	132	183			
Marantz	086	172	183	238	247	
Marta	291					
Matsui	331					
Memorex	368					
Mitsubishi	132	238	331	363	369	
MTV	370					
Montgomery Ward	255	258				
Multi Tech	132	172				
NEC	066	170	173	373		
	132	172	367			
	120	238	243	291	374	
	375					

##### VCR Setup Codes

BRAND	CODE
Admiral	066 075
Aiwa	132
Akai	269 275 336 351 352
	354
Audio Dynamics	243 291
Bell & Howell	238 357

#### Synergy® V Model RT-U64CP

Programming your electronic devices using the [CH +] or [CH -] buttons ("Power" function during programming)...

- Turn on all the electronic devices (TV, VCR, DVD, AUDIO) you want to program the remote to operate
- Press [SEL], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).
- Press and hold the [CH +] button until one device turns off. While you are pressing the [CH +] button, the power / mode buttons will illuminate in fast-rotation. As soon as one device turns off, release the [CH +] button.
- Press [MUTE]. If the device that turned off...
  - Turns back on, press [SEL] to lock in this code. The power / mode buttons will blink 3-times and go out.  
Or
  - Does not turn back on, press [CH -] one step at a time until that device turns back on. Each time you press the [CH -] button, the power / mode buttons will illuminate once in reverse fast-rotation (AUDIO → DVD → VCR → TV → CBL).  
Once you have found a code that turns the device on / off, press [SEL] to lock in this code. The power / mode buttons will blink 3-times and go out.
- Repeat steps 2 to 4 above for each of the remaining electronic devices you wish to program the remote to operate.

##### 6. Programming Your TV, VCR or TV / DVD Combination

- First, turn on your TV / VCR or TV / DVD combination device and install a VHS tape or DVD.
- Next, program your remote to operate the TV functions of your combination device.  
Using the Code Entry Programming method described in Section 5, find a **TV Setup Code** that operates the TV functions (Power, Vol +/-, Mute) of your combination device.
- Last, program your remote to operate the VCR or DVD functions of your combination device.  
Using the Code Entry Programming method described in

#### Synergy® V Model RT-U64CP

Section 5, enter, lock and test each 3-digit VCR or DVD Setup Code for your brand until a code is found that operates the VCR or DVD transport functions (Play, Stop, FF, Rew, Pause, Rec) functions of your combination device.

Before you can test for the correct VCR or DVD setup code, you must first press the [MODE] button, then the [VCR] or [DVD] button to put the remote in its VCR or DVD mode

##### 7. Programming Your TV / VCR / DVD Combination

- First, turn on your TV / VCR / DVD combination device and install a VHS tape or DVD.
- Next, program your remote to operate the TV functions of your combination device.  
Using the Code Entry Programming method described in Section 5, find a **TV Setup Code** that operates the TV functions (Power, Vol +/-, Mute) of your combination device.
- Next, program your remote to operate the DVD functions of your combination device.  
Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit **DVD Setup Code** for your brand until a code is found that operates the DVD transport functions (Play, Stop, FF, Rew, Pause) of your combination device.
- Before you can test for the correct DVD setup code, you must first press the [MODE] button, then [DVD] button to put the remote in its DVD mode.
- Last, program your remote to operate the VCR functions of your combination device.  
Using the Code Entry Programming method described in Section 5, enter, lock and test each 3-digit **VCR Setup Code** for your brand until a code is found that operates the VCR transport functions (Play, Stop, FF, Rew, Pause, Rec) of your combination device.
- Before you can test for the correct VCR setup code, you must first press the [MODE] button, then [VCR] button first to put the remote in its VCR mode.

#### Synergy® V Model RT-U64CP

##### TV Setup Codes

BRAND	CODE				
Admiral	026	054	211	213	
Adventura	047				
Advent	072	094	425	447	
Aiwa	214	471			
Akai	053	462	472		
Amark	023	215			
Amstrad	157				
Anam	217	218	219	220	221
	222	223			
AOC	053				
Apex	030	038	427		
Audiovox	220	465			
Belcor	073				
Bell & Howell	211	213			
Broksonic	166	167			
Brokwood	073				
Candle	068	091			
Centurion	095	107	108		
Citizen	068	091	211	213	233
Concerto	073	095			
Contec	147				
Coronado	023				
Craig	223				
Crown	023				
Curtis Mathes	016	054	107	108	211
	213				
Daewoo	051	068	073	095	158
	159	189	191	194	196
	197	198	200	202	204
	205	206	207	209	
Daytron	073	095	107	108	
Dell	448				
Dumont	073				
Electro Home	073	095			
Elektra	353				
Emerson	016	023	053	064	103
	139	158	159	164	165
	166	167	168	169	392
	400	401	402	408	415
Envision	073	095			
ESA	454				

#### Synergy® V Model RT-U64CP

Fisher	355	356			
Fujitsu	460	469			
Funai	047	048	157	168	211
Gateway	426				
GE	015 018 042 044 049				
	054 055 068 073 090				
	092 095 101 102 103				
	389 390 396 403 406				
	407				
Gibraffa	023 048 053 068 073				
	090 095 107 108 233				
	360				
Goldstar (LG)	023 053 068 073 090				
	107 108 233 360 361				
Go Video	443				
Grundig	233				
Hall Mark	073 095				
Hitachi	023 068 095 096 097				
	098 099 100				
Hyundai	453				
Inkel	364				
Insignia	450 461				
Intial	470				
JC Penney	039 053 068 073 092				
	095 102 355				
JVC	104 105 106 396 397				
	410				
Jensen	062				
Kawasho	073 095				
KMC	023				
Konika	445				
KTV	023 053 233 366				
Kurazai	211 213				
LG (Goldstar)	023 053 068 073 090				
	107 108 233 360 361				
Lodgenet	211 213				
Logik	211 213				
Luxman	068 073 095				
LXI	024 026 157				
Magnavox (Philips)	023 068 071 073 089				
	090 091 093 134 385				
	387 397 404 072 092				
	094 463 470				
Majestic	211 213				
Marantz	053 107 108 109				

#### Synergy® V Model RT-U64CP

Megatron	215				
Memorex	090 211 213 355 388				
	405				
MGA/Mitsubishi	053 068 073 090 095				
	107 108 109 110 216				
	384 394 395 398 399				
	417				
Mintek	470				
Montgomery Ward	022 023 026 053 071				
	072 108 211 213				
NEC	028 068 090 108 200				
	464				
Norcent	455				
Olevia	473				
Orion	019 159 160 161 162				
	163 382				
Panasonic	042 043 044 045 046				
	429				
Philco	023 053 068 071 072				
	091				
Philips(Magnavox)	023 068 071 073 089				
	090 091 093 134 385				
	387 397 404 072 092				
	094 463 470				
Pilot	073 094 233				
Pioneer	111 144 383				
Portland	023 068				
ProScan	065 070				
Proton	090 371 372 457 467				
Proview	459				
Pulsar	073				
Quasar	044				
Radio Shack	073				
Realistic	022 166 168				
	042 052 053 054 055				
	069 070 416 088				
Sampo	090 108				
Samsung	015 016 017 023 031				
	090 107 108 134 147				
	151 153 386 411				
Sansui	423 424				
Sanyo	353 355 356 376 377				
Sceptre	468				
Scott	090 108 168				
Sears	023 031 038 039 068				

## Audio Setup Codes

BRAND	CODE				
Compact Disc					
ADC	318				
Akai	249	261			
Aiwa	176				
Carver	176	155			
Crown	154				
Denon	273				
Fisher	230	274			
Goldstar (LG)	308				
Harman Kardon	315				
JVC	297				
Kenwood	131	176	274	289	299
	444				
Krol	176				
LG (Goldstar)	308				
Magnavox (Philips)	037	084	119	296	433
Mission	176				
Mitsubishi	245	249			
NAD	182	231	290		
Nakamichi	264	319			
NEC	235				
NSM	176				
Onkyo	300				
Panasonic	184	266	437		
Philips (Magnavox)	037	084	119	296	433
Pioneer	116	127			
Quasar	184				
Radio Shack	186	190	266	279	289
RCA	295	037	119		
Sanyo	230	309			
SAE	176				
Scott	186				
Sharp	288	269			
Sony	067	292	293		
Soundesign	148	242	311	320	
STS	318				
Sylvania	084				
Teac	186				
Technics	184	208	317		
Toshiba	290				
Yamaha	280				
Receiver / Amplifier					
Adcom	325				

Aiwa	301				
Akai	142				
Bose	302	440			
Carver	155	180			
Denon	262	307			
Everquest	136				
Fisher	063	180			
Fosgate Audionics	305				
Goldstar (LG)	036				
Harman Kardon	130	257	305	306	
Hitachi	240				
Jensen	140				
JVC	114	241			
Kenwood	063	277	444		
LG (Goldstar)	086				
Luxman	281				
Magnavox (Philips)	080				
Marantz	282	283	284	285	
NAD	286				
Onkyo	126	171	304		
Optimus	142	229	321		
Panasonic	032	074	438	441	
Parasound	323				
Philips (Magnavox)	080	463			
Pioneer	123	137	251	298	
Quasar	032				
Radio Shack	229	267			
RCA	439				
Realistic	226	268			
Rotel	310				
Sansui	283				
Sanyo	195				
Scientific Atlanta	312				
Scott	272				
Sharp	284				
Sherwood	229	267			
Sony	041	057	232	287	442
Soundesign	083	088	239	265	
SSI	313				
Taekwang	142				
Teac	314	316			
Technics	032				
Wards	063				
Victor	114	241			
Yamaha	145	254	303		
Zenith	036	083	088	239	265

8. Code Number Read-Back					
To identify the 3-digit setup codes stored under the Point and Press® programming method, follow these steps :					
To identify the TV setup code...					
1. Press [TV], then [SEL] together until the [TV] button illuminates.					
2. Press [INFO]. The mode buttons will "blink back" the code numbers, with a 1-second interval between each digit of the code. Please note that for the numeric "0", the mode buttons will illuminate blink in last sequence.					
Example : For code "130", the remote will blink 1 time, then 3 times, then in a last sequence for the 0					
To identify the 3-digit VCR code, press [VCR], then [SEL] in step 1, then press [INFO].					
To identify the 3-digit DVD code, press [DVD], then [SEL] in step 1, then press [INFO].					
To identify the 3-digit AUDIO code, press [AUDIO], then [SEL] in step 1, then press [INFO].					
9. ALL SmartKey®					
Once you have programmed the remote to operate your electronic devices, you can press the [ALL] SmartKey® to turn your Cable set-top terminal and TV on / off with one button press. You can also program the [ALL] button to turn on / off additional electronic devices and / or tune your TV to its correct output channel.					
Programming the [ALL] SmartKey®					
1. Press [ALL], then [SETTINGS] together until the [CBL] button illuminates.					
2. Enter one of the following options on the keypad of the remote :					
[0] · Turns on / off CBL + TV (default setting)					
[1] · Turns on / off CBL + TV and tunes TV to output Channel 3.					
[2] · Turns on / off CBL + TV and tunes TV to output					

Channel 2.					
[3] · Turns on / off CBL + TV and tunes TV to output Channel 4.					
[10] · Turns on / off CBL + TV + VCR + DVD					
[4] · Turns on / off CBL + TV + VCR + DVD and tunes TV to output Channel 3.					
[5] · Turns on / off CBL + TV + VCR + DVD and tunes TV to output Channel 2.					
[6] · Turns on / off CBL + TV + VCR + DVD and tunes TV to output Channel 4.					
[11] · Turns on / off CBL + TV + VCR + DVD + AUDIO					
[7] · Turns on / off CBL + TV + VCR + DVD + AUDIO and tunes TV to output Channel 3.					
[8] · Turns on / off CBL + TV + VCR + DVD + AUDIO and tunes TV to output Channel 2.					
[9] · Turns on / off CBL + TV + VCR + DVD + AUDIO and tunes TV to output Channel 4.					
[12] · Turns on / off CBL + TV + AUDIO					
[13] · Turns on / off CBL + TV + AUDIO and tunes TV to output Channel 3					
[14] · Turns on / off CBL + TV + AUDIO and tunes TV to output Channel 2					
[15] · Turns on / off CBL + TV + AUDIO and tunes TV to output Channel 4					
3. As soon as you select an option, the [CBL] button will blink 3-times and go out.					
Using the [ALL] SmartKey®					
When pressing the [ALL] SmartKey®, be sure to keep the remote control aimed at your electronic devices until your electronic devices turn on or / off.					
Whenever the [ALL] SmartKey® is pressed, the mode of the remote control will automatically switch back to Cable.					
10. Volume Control					
When you first program your remote, volume / mute are controlled through your TV (except AUDIO which defaults to the AUDIO device). The volume control options in each					

mode of the remote are :	
CBL	TV (default), Cable or Audio.
TV	TV (default), Cable or Audio.
VCR	TV (default), Cable or Audio.
DVD	TV (default), Cable or Audio.
AUDIO	AUDIO device (default), Cable or TV.
To control volume / mute through your Cable set-top terminal in the remote's Cable mode...	
1. Press [CBL], then [SEL] together until the [CBL] button illuminates.	
2. Press [VOL +], then [CBL] for Cable volume. The [CBL] button will blink 3-times and go out.	
To return volume control to your TV, repeat step 1, then press [VOL +], then [TV] in step 2.	
11. Channel Memo® Buttons : MUSIC, MOD, NEWS, HELP	
Your remote has 4 Channel Memory Buttons - [MUSIC], [MOD] (Movies-On-Demand), [NEWS], [HELP] (may be labeled differently on some models). Each of these buttons can store up to 5 cable channels. Each cable channel can be up to 5-digits	
Some or all of your remote's Channel Memory Buttons may come pre-tuned to channels or functions selected by your cable operator. If they have not been pre-tuned by your cable operator, they can be programmed as follows:	
Programming Channel Memory Buttons	
For example, to program the [MOD] button to cable channels 1, 12, 123, 1234, 17, follow these steps:	
1. Press [MOD], then [CBL] together until the [CBL] button illuminates.	
2. Enter each channel as follows (ex. assumes 4-digit channel format) :	
a. Enter 1 <sup>st</sup> channel # - 0001.	
b. Press [CH +] to advance to next channel # setting.	

c. Enter 2 <sup>nd</sup> channel # - 0012.
d. Press [CH +] to advance to next channel # setting.
e. Enter 3 <sup>rd</sup> channel # - 0123.
f. Press [CH +] to advance to next channel # setting.
g. Enter 4 <sup>th</sup> channel # - 1234.
h. Press [CH +] to advance to next channel # setting.
i. Enter 5 <sup>th</sup> channel # - 0017.
3. Press [MOD] to store the above channels. The [CBL] button will blink 3-times and go out. To store fewer than 5 channels, you can press the [MOD] button any time after entering a complete channel number.
4. Repeat the above steps to program the [MUSIC], [NEWS] and [HELP] buttons. Follow the example in step 1, but press [MUSIC] or [NEWS] or [HELP], then [CBL] together until the [CBL] button illuminates
Using Channel Memory Buttons
Using the above programmed channels as an example...
1. Press [MOD] : Cable set-top terminal tunes to channel 0001.
2. Press [MOD] again : Cable set-top terminal tunes to channel 0012.
3. Press [MOD] again : Cable set-top terminal tunes to channel 0123.
4. Press [MOD] again : Cable set-top terminal tunes to channel 1234.
5. Press [MOD] again : Cable set-top terminal tunes to channel 0017.
6. Press [MOD] again : Cable set-top terminal tunes to channel 1.... repeat.
Whenever a Channel Memory button is pressed, the function of the transport buttons will automatically switch back to Cable.
When pressing the Channel Memory Buttons, be sure to keep the remote control aimed at your Cable set-top

terminal to ensure the full channel numbers are received in their entirety.

If you are using your Synergy® V remote to operate a Cable set-top terminal other than the Explorer® 8000 model, you may only have to enter channels in a 3-digit format (ex. 012).

## 12. Video Source

This button changes the Input source of your electronic devices. In the remote's Cable mode, this operates a Cable function. In the remote's TV mode, this button changes the Input Source (Input 1, Input 2...) on your TV. In the remote's VCR mode, this button changes the TV / VCR Input on your VCR.

You can program this button so that in the remote's Cable mode, [VIDEO SOURCE] will operate the Input function on your TV or VCR, eliminating the need to change modes on the remote.

To program [VIDEO SOURCE] to operate your TV Input function in the remotes cable mode...

1. Press [VIDEO SOURCE], then [SEL] together until the [CBL] button illuminates.
2. Press [TV]. The [CBL] button will blink 3-times and go out.

Note : You can also press [VCR] in step 2 above to operate the TV / VCR function on your VCR. Or press [CBL] to return to the normal CBL Video Source function.


## 13. Reset

To reset your remote control to its factory default settings...

1. Press [CBL], then [SEL] together until the [CBL] button illuminates.
2. Press [0]. The [CBL] button will blink 3 times and go out.

Reset returns the ALL SmartKey®, Volume / Mute, Mode Lock™, features to their factory default settings.

**Important :** The following diagram shows how to use the buttons on your remote control to operate the DVR and PIP functions of the Motorola DCT 6xxx series DVR set-top terminal. To access these functions, set the remote control to its Cable mode by pressing the [MODE] button, followed by the [CBL] button.

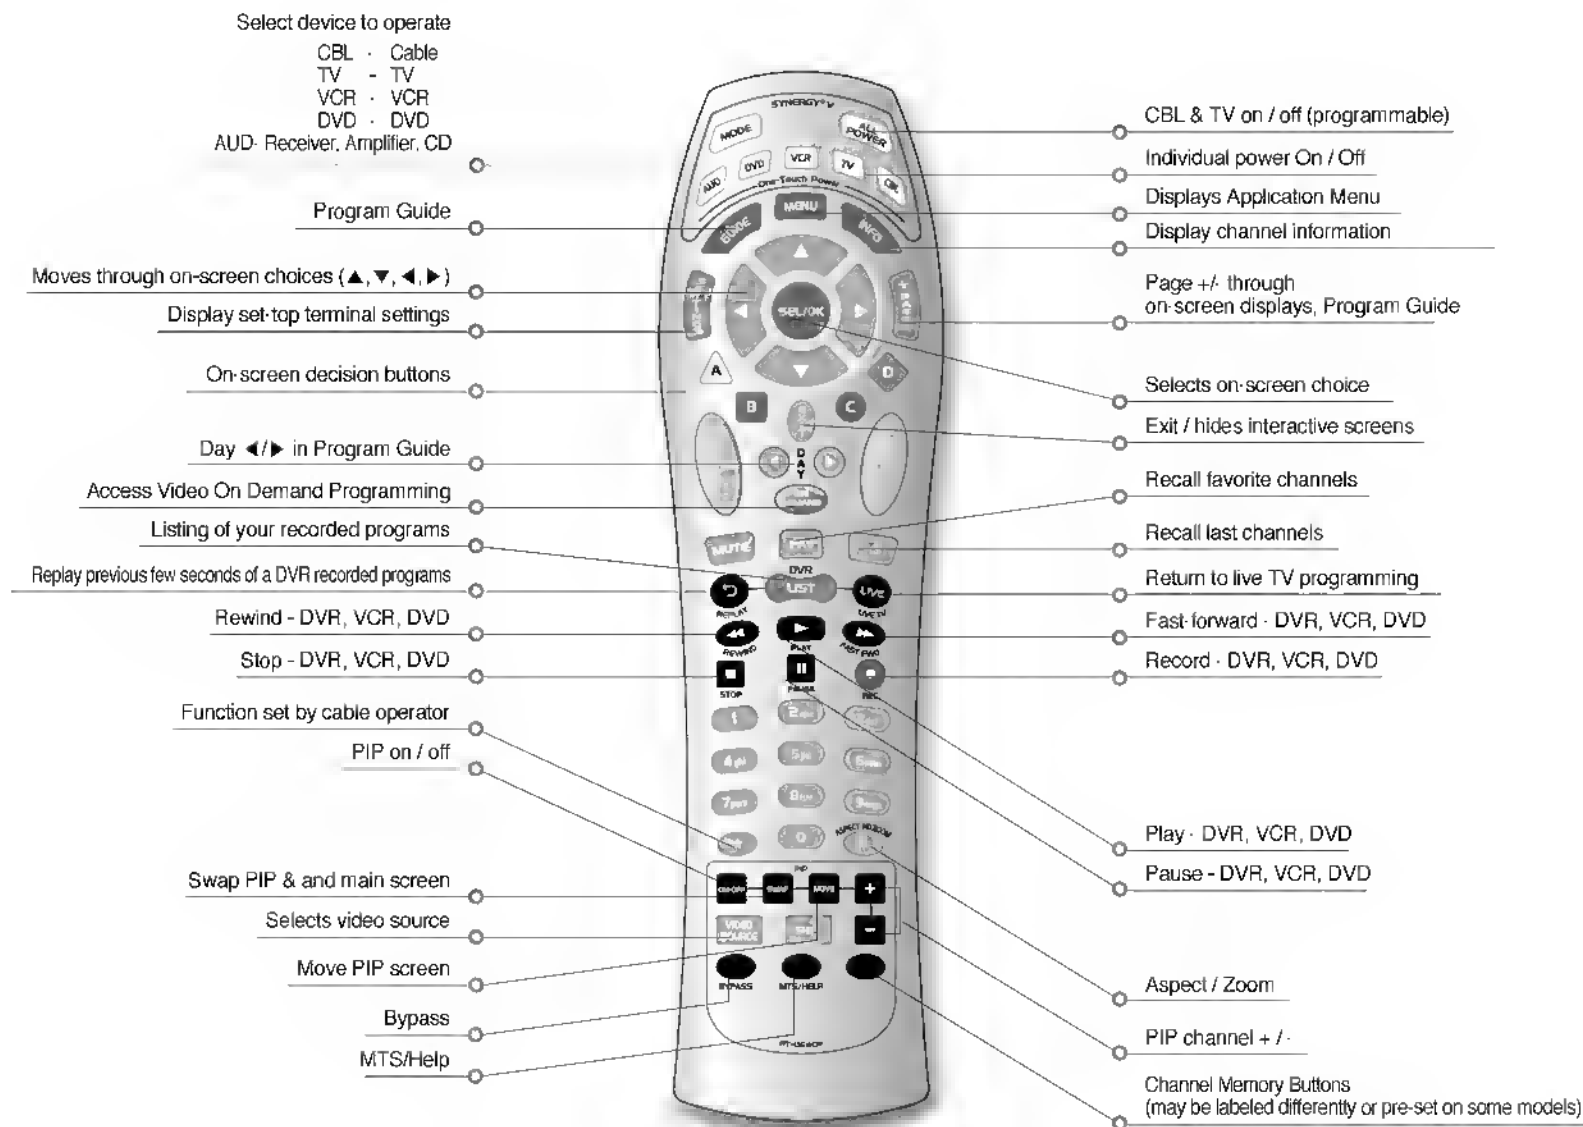

## 14. Additional Programming Information Troubleshooting - Terms

## Additional Programming Information

1. The power / mode buttons will illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...) while the remote is in a programming mode. In the absence of a keypress entry, the power / mode buttons will stop illuminating after 45 seconds and the remote will exit the programming mode.

2. When programming the remote control using the [CH +] or [CH -] buttons (Power function) in the Point and Press® Programming method, you may find a code that turns a device off but not back on. It this happens...

a. The correct code has not been found as you may have a code that operates some but not all of the functions of your device. Continue pressing [CH +] until your device turn on.

OR

b. You may have gone past the correct matching code. Try pressing [CH -] one press at a time until you find a code that turns your device back on.

3. When using the Point and Press® Programming method, you can also program your remote using buttons other than the [CH +] or [CH -] as described in Section 5 as follows:

a. [VOL +] - to "go forward" through the codes using the "VOL +" function on your devices.

b. [VOL -] - to "go back" through the codes using the "VOL -" function on your devices.

Note : When you find the correct code, the volume of the device being programmed will increase or decrease

c. [▲] - to "go forward" through the codes using the "CH +" function on your devices.

d. [▼] - to "go back" through the codes using the "CH -"

function on your devices.

Note : When you find the correct code, the channel of the device being programmed will increase or decrease.

e. [▶▶] - to "go forward" through the codes using the "Fast Forward" function on your devices.

f. [◀◀] - to "go back" through the codes using the "Rewind" function on your devices.

Note : When you find the correct code, the fast-forward or rewind function of the device being programmed will be performed. To simplify programming using these buttons, insert a VHS tape or DVD in the device being programmed.

You can also program your remote using the other available functions as follows :

a. Press [SEL], then [MUTE] together until the power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).

b. In this order, carefully press [0], [0], [0], [CH+] and [VOL+]. The power / mode buttons illuminate in slow-rotation (i.e. CBL → TV → VCR → DVD → AUDIO → CBL...).

c. You can now program your remote using the [CH+], [CH -], [VOL+], [VOL -], [▲], [▼], [FFWD], [REW], [PLAY], [STOP], [REC], [PAUSE], [LAST], [FAV], [0] - [9] buttons. When you find the correct code, the function associated with the selected button will be performed.

4. Your remote is equipped with a Point and Press® Programming label on the back of its case. This will help you quickly program the remote without using codes.

## Troubleshooting / Tips

1. If the same button is pressed and held for 45-seconds, your remote control will turn itself off automatically. This extends the battery life should the remote become lodged under or between heavy objects, for example sofa cushions.

2. When the batteries become low and need to be replaced,

the [CBL], [TV], [VCR], [DVD] and [AUDIO] buttons will not illuminate normally or at all during use, and the remote will no longer operate your devices.

When this occurs, replace the existing batteries with two (2) new AA Alkaline batteries to restore normal operation to the remote. If your remote still does not operate, you may want to check to see if any of the buttons are stuck in their "down" position.

3. If you have a TV that's operated by remote control, it is recommended that you plug it directly into a wall outlet instead of the cable set-top terminal.

4. If you have any questions concerning the brand, model or operation of your cable set-top terminal, contact your cable operator.

## Frequently Used Terms

**AUDIO Devices** - Audio receivers, amplifiers, CD players that you can program your remote to operate.

**DVR** - Digital Video Recorder.

**Default Setting** - How your remote is set when you receive it from your cable operator.